



GLASS CORNER SHELF INSTALLATION


TO INSTALL THE SHELVES YOU WILL NEED A **PAINTABLE ADHESIVE CAULKING**, OR ANY COLOR AVAILABLE THAT IS SIMILAR TO YOUR WALL PAINT (WE DO SUGGEST AND/OR OFFER “ALL-PURPOSE CAULKING” IN WHITE, BEIGE, LIGHT GRAY AND BROWN). FOR COSMETIC REASONS **DO NOT USE CLEAR OR SILICONE CAULKING**.

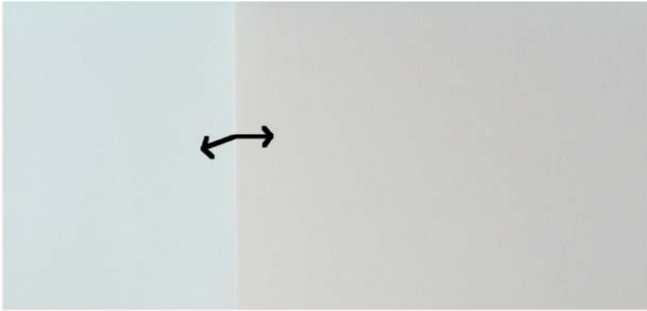


STEP 1 - MARK THE SPOT WHERE YOU WOULD LIKE THE CORNER SHELF TO GO. **IF YOU ARE INSTALLING A RECTANGLE SHELF, BE SURE TO LABEL ONE WALL FOR THE LONG SIDE OF THE SHELF AND THE OTHER WALL FOR THE SHORT SIDE OF THE SHELF.**

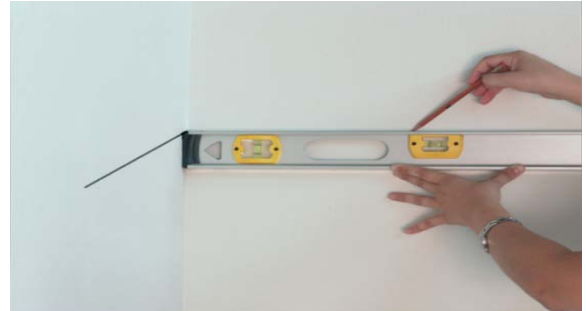

STEP 2 - USE A LEVEL AND DRAW TWO LEVELED LINES AT ABOUT THE SAME LENGTH OF THE SHELF, ONE AT EACH SIDE OF THE WALL WHERE THE SHELF IS GOING TO BE INSTALLED.

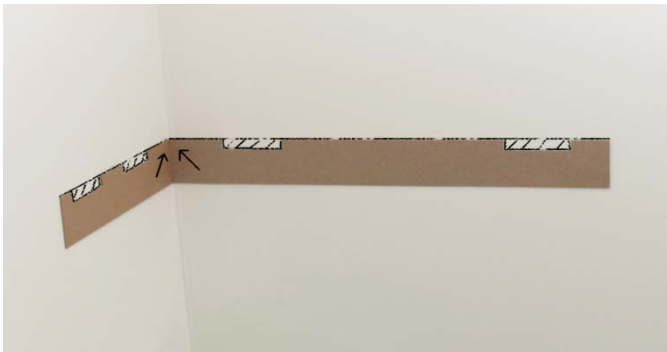

STEP 3 - USING THE SUPPLIED TEMPLATE MARK THE POSITION OF THE GROOVES ON THE WALL. THE ARROW ON THE TEMPLATE MUST POINT TO THE CORNER.

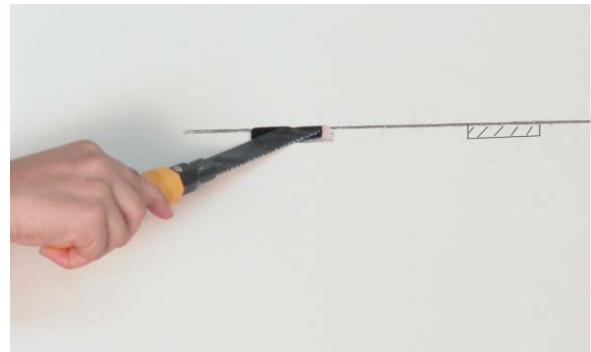

STEP 4 - USE DRILL TO START CUTTING THE GROOVES, FOLLOWED BY USING THE WALL-SAW. ONLY CUT THE AREA THAT IS MARKED. THEN, TEST TO FIT THE SHELF INTO THE GROOVES. **CLEAN ALL GROOVES AND WALLS FREE OF DUST.**

ALSO:
YOU CAN CUT THE GROOVES WITH A MULTI-TOOL. MULTI-TOOL IS AN EXCELLENT TOOL FOR DRYWALL, PLASTER WALLS OR WOOD APPLICATIONS




STEP 5 - APPLY 3/8" BEAD OF CAULKING ADHESIVE JUST BELOW THE LINES, AND IN THE GROOVES. INSTALL THE SHELF IMMEDIATELY BEFORE THE CAULKING DRIES. AFTER INSTALLATION, FILL ALL GAPS WITH MORE CAULKING IF NEEDED.




STEP 6 - PUSH THE SHELF IN PLACE. THEN USING A WET SPONGE CLEAN ALL EXCESS CAULKING. LET IT DRY OVER NIGHT. IF NECESSARY, YOU MAY PATCH AND PAINT ANY GAPS FOR A BETTER APPEARANCE.

Shelf Installation (“Before” Tiles Installation)

The Tile installer can prep the wall for shelf installation by cutting the grooves and leaving them open. It is best to mark and cut the grooves above the grout line. Use the template to mark the grooves.

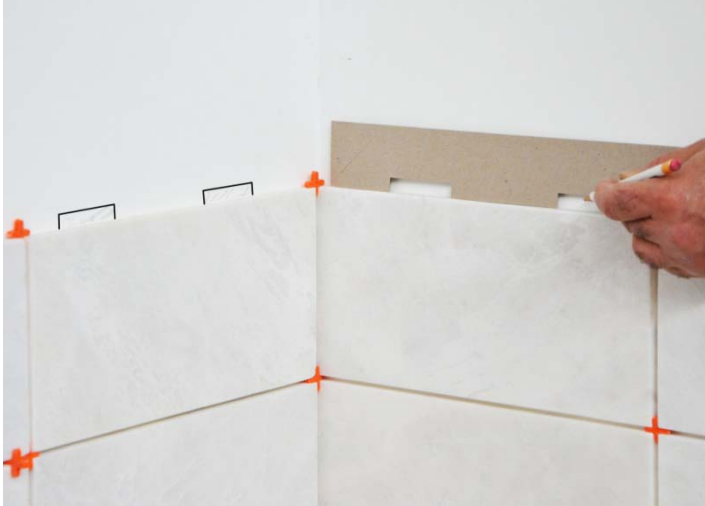


You may have to cut the tile backer board to let the shelf in. Shelf can easily be installed after the grout is done and dry. Follow instructions in step 5 & 6 to finish the installation.

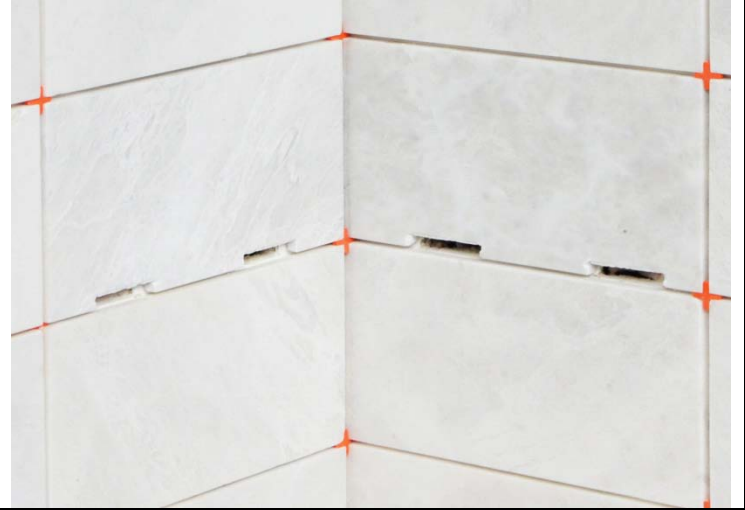

Shelf Installation (For Tile, Stone or Cement walls)

Use the template and mark the area to be cut. Then use a 1/8" arrow head tile drill bit to make few start holes as shown.

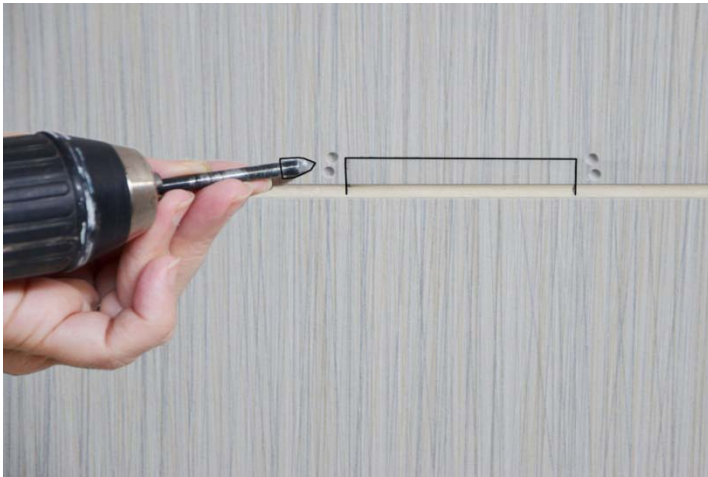

Use a tile saw with 4" diamond blade to cut along the marked line



Chip away the tile with a cold chisel.



You may have to cut the tile backer board to be able to fit the shelf. Always test fit the shelf before going forward to step 5 and 6.

